

# How to Check Your Tank Gauge

Unless you are a 'Keep Full' customer, you will need to regularly monitor your tank level to make sure you don't run out.

## Propane Customers

To check the gauge on your propane tank, look for the round dial (it looks like a speedometer) with numbers from 5 – 95. So that propane gas has room to expand with changing temperatures, an above ground tank is considered full at 80% of its capacity. You should call Co-Alliance to request a delivery when your tank is at the 30-40% level or at least 10 days before you would like it to arrive.

<b>GALLONS REMAINING</b>				
<b>* Underground tanks are considered full at 85% capacity</b>				
Propane Tank Gauge Reads	125 gal tank	325 gal tank	500 gal tank	1000 gal tank
80%	100	260	400	800
70%	87.5	227.5	350	700
60%	75	195	300	600
50%	62.5	162.5	250	500
40%	50	130	200	400
30%	37.5	97.5	150	300
25%	<b>If your gauge reads 25%, call (800) 525-0272 to request delivery!</b>			
20%	25	65	100	200
10%	12.5	32.5	50	100